

# THE CLASSIC HIGH CHAIR TRAY USAGE INSTRUCTIONS

P/N KB104

## Please Note:


The child should be secured in the Koala high chair at all times by the child protection strap.

The Koala tray (optional) is not designed to hold the child in the chair. It is recommended that the Koala high chair be used only by children capable of sitting upright and unassisted. Do not leave the child unattended while using the Koala high chair.

## Restraint Usage:

To fasten the waist strap, push spring tabs into the buckle receptacle until both lock in place and a "click" is heard.

The waist restraint can be adjusted to make the strap tighter or looser.

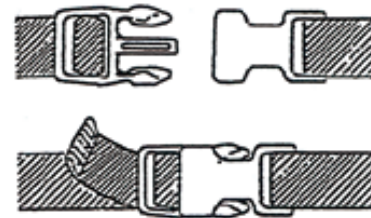


## You are responsible for the safe operation of this unit.

### Tray Instructions:

The tray can be attached to (and removed from) the high chair by pulling out both ends of the round side latches at the same time, and sliding the tray in (or out) of tray notches.

The tray may be stored on the back of the high chair by utilizing the latches and holes. Do not stack chairs with trays stored in this manner.

For correct installation, the metal brackets on the bottom of the tray must engage the notched areas on each side of the high chair.

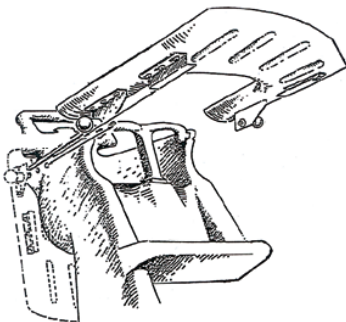

### Maintenance:

Clean and sanitize regularly. The Classic High Chair can be cleaned as follows:

- Wipe down high chair with a soft rag using a non-abrasive cleaner.
- Cycle in a commercial dishwasher.

**Important:** DO NOT USE BLEACH on this product. May cause discoloration. Use of bleach on this product will void warranty. Do not use abrasive cleaners as they can scratch the product.

To order replacement parts call  
888.733.3456 or 303.539.8300  
or visit [www.koalabear.com](http://www.koalabear.com).

