


Installation Instructions For

Models PT-1/BC-4000 PT-2/BC-4100

Polypropylene Laundry Tubs

Model PT-1/BC-4000

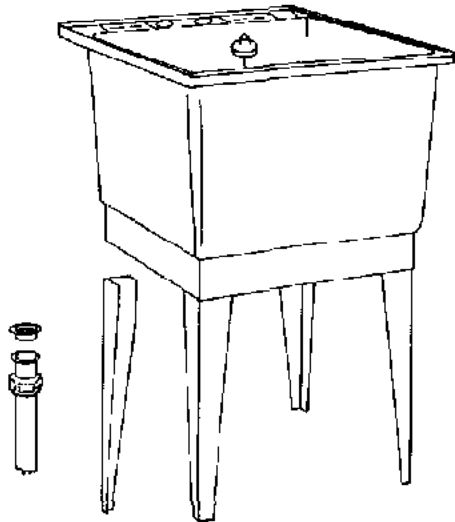

Assembly Instructions

- Step 1.**
Use short bolt and nut to attach leveller clips to hole in lower side of leg.
- Step 2.**
Insert legs.
- Step 3.**
Adjust levellers, figure 2-A.
- Step 4.**
Use figure 2-B if anchored. Anchor and fastener not furnished.
- Step 5.**
Attach faucet or faucet block (not supplied) to top supply, see figure 3.
- Step 6.**
Waste (not supplied) can be connected with slip joint nut and washer.

CAUTION: Do not overtighten slip joint nut.

Figure 1

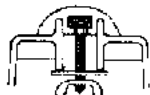


Figure 2A

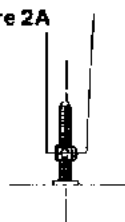


Figure 2B



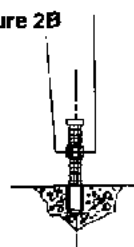


Figure 3

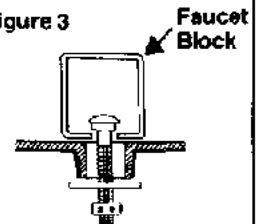

Model PT-2/BC-4100

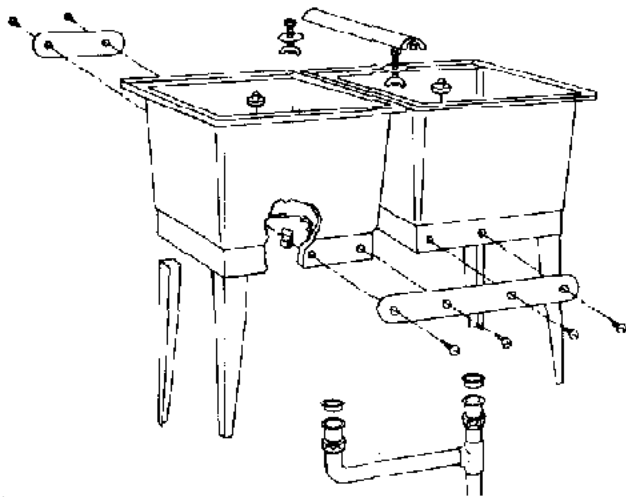

Assembly Instructions

- Step 1.**
Attach front and rear metal strips to tubs.
- Step 2.**
Attach faucet or faucet block (not supplied) to top supply, see figure 3.
- Step 3.**
Install divider strip, see figure 1.
- Step 4.**
Use short bolt and nut to attach leveller clips to hole in lower side of leg.
- Step 5.**
Insert legs.
- Step 6.**
Adjust levellers, figure 2-A.
- Step 7.**
Use figure 2-B if anchored. Anchor and fastener not furnished.
- Step 8.**
Attach twin waste using slip joint nut and washer.
- CAUTION: Do not overtighten slip joint nut.**